

Be sure to check out all the exciting products  
*Rush Creek* has to offer. Visit our web site at:

[www.rushcreeklogfurniture.com](http://www.rushcreeklogfurniture.com)



**Warranty:**

All of our products come with a three year warranty on all parts.

**Manufacturer Defects:**

Defective parts will be replaced at no cost to you. Please send an e-mail to [cs@rushcreeklogfurniture.com](mailto:cs@rushcreeklogfurniture.com) including photos of the defective part(s) and we will send replacements. PLEASE NOTE: Cracks in logs are not defects. They may develop during the log drying process and do not affect the stability of the piece in any way, and add to the rustic appeal of your log furniture.

If your product needs service, please be advised that Rush Creek reserves the right to decline service when the product is found to be excessively worn, altered in any way, or when damage is caused by acts other than defective workmanship or materials. This warranty is void if the product has been subject to abuse. For service under this warranty, please contact Rush Creek. Please provide your receipt as proof of purchase.

*Rush Creek*

Rush Creek  
West Allis, WI 53227  
[www.rushcreeklogfurniture.com](http://www.rushcreeklogfurniture.com)  
Rush Creek is a trademark owned by Triumph Sports USA  
©2011 Triumph Sports USA. All Rights Reserved.

Item # 37-0006



*Rush Creek*™

**TEXAS HOLD'EM  
POKER TABLE**



**If you have any problems with your new product,  
DO NOT RETURN IT TO THE STORE!**

**Please contact us at 1-866-815-4173,  
or e-mail us at [cs@rushcreeklogfurniture.com](mailto:cs@rushcreeklogfurniture.com)**

## Tools Needed For Assembly:

Screwdriver  
Level

## Assembly Tips:

Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.

If you are using an electric screw driver in assembly, please set at low torque and do not overtighten the hardware.

 
 
 
 





## Care:

Apply lemon oil with a soft cotton cloth. Do not use products with silicones. This may cause damage to the finish. Never let the wood get in contact with any type of paint remover.

## Connections:

Changes in temperature and humidity will cause the wood to dry out possibly causing the bolts loosen. Check the bolts periodically to make sure they are still tight. DO NOT put your wood game piece directly against hot radiators or sources of heat. Doing this may cause the wood to dry and crack.

## Parts List

#1  Leg Panel (A) 2 Pieces	#2  Leg Panel (B) 1 Piece	#3  Table Top 1 Piece	#4  Bolt 4 Pieces
#5  White Washer 4 Pieces	#6  Flathead Screw 4 Pieces	#7  Wood Cap 4 Pieces	#8  Leg Leveler 4 Pieces
#9  Washer 4 Pieces			

## Step 1

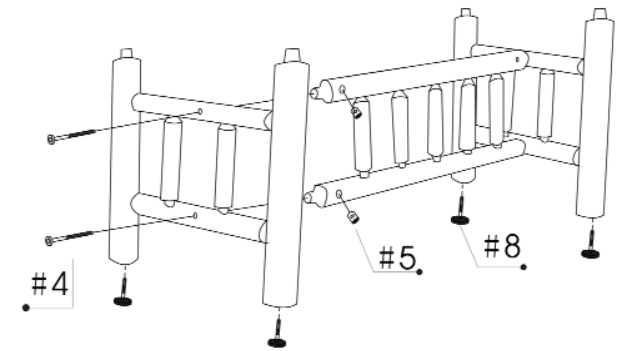
Lay leg panel I (#1) on the floor with the holes for the leg panel II (#2) facing up. **NOTE:** Leg panels are labeled A, B, C, D on each end. Please correspond with stickers. See diagram.

## Step 2

Push leg panel II (#2) into the holes on the leg panel I (#1). When all three panels are firmly fitted, attach pieces with bolts (#4), white washers (#5) and washers (#9). Do not completely tighten leg panels until step 4 is completed.

## Step 3

Screw the leg levelers (#8) to the bottom of the legs.



## Step 4

Lay table top (#3) on top of assembled legs, tighten with screws (#6). Using wood caps (#7) to fill the holes.

